

Failure to install meters as specified in this information will require removal and proper reinstallation *at plumber's expense*.

Liss Technologies is the system integrator; after the meters are installed, we set up the remote meter reading system.

INSTRUCTIONS ENCLOSED



Plumber MUST read our instructions labeled with the *Quick Start* emblem. Important issues are highlighted for easy identification.



Carefully review the enclosed meter manufacturer's *Installation Instructions*, identified with the blue *Master Meter* logo.

FLOW TUBES

3/4" water meters will be furnished with removable flow tubes made of either **brass**, where copper water tubing is specified, or **plastic**, where plastic tubing, such as PEX, is specified.





CRITICAL POINTS

- Each meter has an apartment address label attached. It is absolutely critical the meter is installed in the apartment listed on the label.
- You must provide adequate clearance for meters from walls and heat sources as shown on the enclosed Water Water Meter Clearance Drawing.
- Water pipes supplying three-quarter inch FAM meters can be positioned horizontally or vertically, for accurate measurement, however, the meter body must be positioned vertically so the meter face points upward as shown below.



Horzontal feed

Head (meter face) points upward



Vertical feed

- Meters have MPSM threads (not NPT threads). They use gaskets so meter couplings should never be over-tightened. Aftere attaching the coupling, hand tighten and use a wrench to tighten the coupling ONLY one-quarter turn further, no tighter.
- One inch meters **must** be installed in a true horizontal orientation.